




INSTALLATION INSTRUCTIONS

2020 - up CHEVY 2500HD/3500HD FRONT BUMPER REPLACEMENTS

BFERC20HDR/C

1. To remove the factory bumper, you will need to remove the factory grille. You will need to remove the side panels first. Start by removing the inner fender well screws. This will allow to get to the back side of the plastic clips. There will also be a small screw in the corner that need to be removed before the side panel can be pulled off.

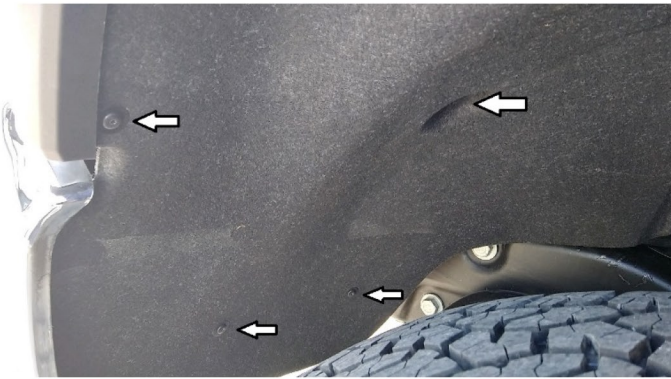

2. Remove the factory grille. Open the hood and remove the hood release latch by removing two T15 screws. Remove the ten plastic clips holding the plastic shield located above the grille.

