



13. Mount the fog light bracket to the mounting bracket by using 5/16" hardware. Line up the light through the hole in the skirt and tighten bolt.

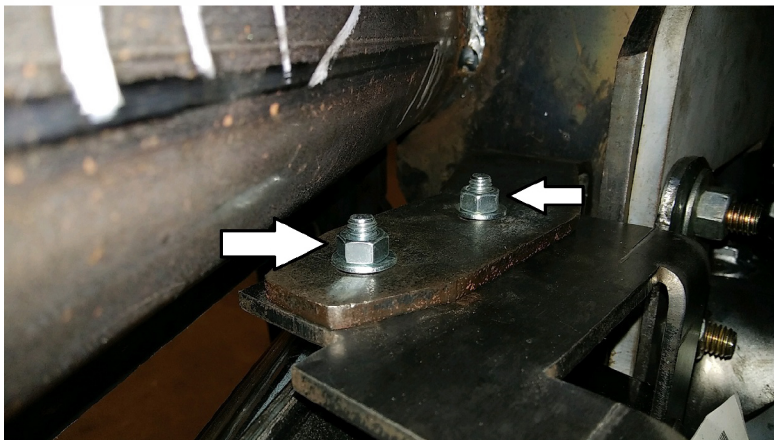

14. Plug in wires and then adjust fog lights as needed.

****MAKE SURE ALL NUTS AND BOLTS ARE TIGHT!***

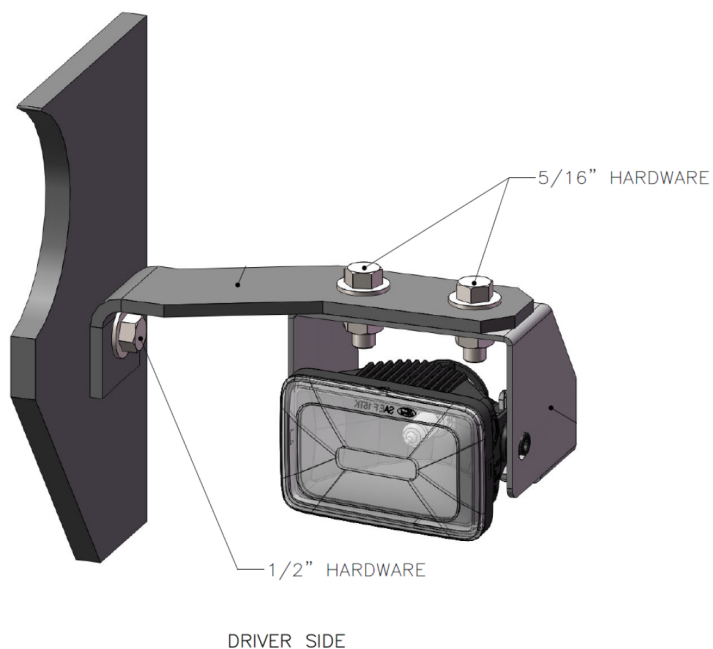

ASSEMBLY INSTRUCTIONS
HALOGEN LIGHT BRACKET
2020 FORD SD